

# AgriMetal

INC.



3 Point Hitch



Trailer

## PORTABLE BENCH SAW MODEL MBS 724 TP OPERATOR'S MANUAL

**AGRIMETAL INC.  
PORTABLE BENCH SAW**

**WARRANTY**

AgriMetal Incorporated (AgriMetal) warrants the new **Portable Bench Saw** to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

**WARRANTY CLAIMS**

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

**LIMITATIONS OF LIABILITY**

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Portable Bench Saw**.

This warranty shall not apply to any **Portable Bench Saw** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

**OPERATOR'S MANUAL**

The Purchaser acknowledges having received training in the safe operation of the **Portable Bench Saw** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Portable Bench Saw** in any manner other than described in the Operator's Manual supplied at the time of purchase.

**WARRANTY VOID IF NOT REGISTERED**

# AGRIMETAL PORTABLE BENCH SAW

## WARRANTY REGISTRATION FORM & INSPECTION REPORT

### WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name \_\_\_\_\_ Dealer Name \_\_\_\_\_

Address \_\_\_\_\_ Address \_\_\_\_\_

City, State/Prov., Code \_\_\_\_\_ City, State/Prov., Code \_\_\_\_\_

Phone Number ( \_\_\_\_ ) \_\_\_\_\_

Bench Saw Model \_\_\_\_\_

Serial Number \_\_\_\_\_

Delivery Date \_\_\_\_\_

### DEALER INSPECTION REPORT

- \_\_\_ Blade Turns Freely
- \_\_\_ Belt Tension Checked
- \_\_\_ Drive Pulleys Aligned
- \_\_\_ Check Engine Fluid Levels
- \_\_\_ Fasteners Tight
- \_\_\_ Lubricate Machine
- \_\_\_ Check Tire Pressure

### SAFETY

- \_\_\_ All Decals Installed
- \_\_\_ Guards and Shields Installed and Secured
- \_\_\_ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date \_\_\_\_\_

Dealer's Rep. Signature \_\_\_\_\_

Signature \_\_\_\_\_

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date \_\_\_\_\_

Owner's Signature \_\_\_\_\_

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

# SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Portable Bench Saw when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



3 Point Hitch



Trailer

Model Number \_\_\_\_\_

Bench Saw Serial Number \_\_\_\_\_

Engine Serial Number \_\_\_\_\_

# TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
<b>1</b>	<b>Introduction .....</b>	<b>1</b>
<b>2</b>	<b>Safety .....</b>	<b>2</b>
2.1	General Safety.....	3
2.2	Equipment Safety Guidelines .....	4
2.3	Safety Training.....	5
2.4	Safety Signs .....	5
2.5	Preparation .....	6
2.6	Operating Safety.....	7
2.7	Transport Safety .....	8
2.8	Storage Safety.....	8
2.9	Refuelling Safety .....	8
2.10	Tire Safety .....	8
2.11	Maintenance Safety.....	9
2.12	Gas Motor Safety.....	10
2.13	Sign-Off Form .....	11
<b>3</b>	<b>Safety Sign Locations .....</b>	<b>12</b>
<b>4</b>	<b>Assembling .....</b>	<b>18</b>
4.1	Machine Assembly.....	18
<b>5</b>	<b>Operation.....</b>	<b>20</b>
5.1	To the New Operator or Owner.....	20
5.2	Machine Components.....	21
5.3	Break-In .....	22
5.4	Pre-Operation Checklist .....	22
5.5	Controls .....	23
5.6	Hooking Up/Unhooking.....	26
5.6.1	Trailer .....	26
5.6.2	3 Point Hitch.....	27
5.7	Field Operation .....	28
5.8	Transporting.....	38
5.9	Storage.....	39
<b>6</b>	<b>Service and Maintenance.....</b>	<b>40</b>
6.1	Service.....	40
6.1.1	Fluids and Lubricants .....	40
6.1.2	Greasing.....	40
6.1.3	Servicing Intervals.....	41
6.1.4	Service Record.....	44
6.2	Maintenance .....	45
6.2.1	Cleaning Air Cleaner .....	45
6.2.2	Changing Engine Oil .....	46
6.2.3	Belt Drive.....	47
6.2.4	Saw Blade Sharpening.....	48
6.2.5	Blade Assembly.....	49
<b>7</b>	<b>Trouble Shooting .....</b>	<b>50</b>
<b>8</b>	<b>Specifications .....</b>	<b>51</b>
8.1	Mechanical .....	51
8.2	Bolt Torque.....	52
<b>9</b>	<b>Index .....</b>	<b>53</b>

**AGRIMETAL INC.  
1006 RUE PRINCIPALE  
WICKHAM, QUEBEC  
CANADA, J0C 1S0**

**TEL: (819) 398-6883  
FAX: (819) 398-5311**