

AgriMetal INC.



SELF-PROPELLED BLOWER MODEL BWSP-180

OPERATOR'S MANUAL AND PARTS BOOK

AGRIMETAL INC. SELF-PROPELLED BLOWER

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new **Self-Propelled Blower** to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Self-Propelled Blower**.

This warranty shall not apply to any **Self-Propelled Blower** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the **Self-Propelled Blower** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Self-Propelled Blower** in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL SELF-PROPELLED BLOWER

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____ Dealer Name _____
 Address _____ Address _____
 City, State/Prov., Code _____ City, State/Prov., Code _____
 Phone Number (____) _____
 Blower Model _____
 Serial Number _____
 Delivery Date _____

DEALER INSPECTION REPORT

- ___ Blower Turns Freely
- ___ Belt Tension Checked
- ___ Drive Pulleys Aligned
- ___ Check Engine Fluid Levels
- ___ Coupler Aligned
- ___ Check Condition of Hydraulic Components
- ___ Fasteners Tight
- ___ Lubricate Machine
- ___ Check Tire Pressure

SAFETY

- ___ All Decals Installed
- ___ Guards and Shields Installed and Secured
- ___ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____ Dealer's Rep. Signature _____

Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____ Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER


SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Self-Propelled Blower when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



Blower

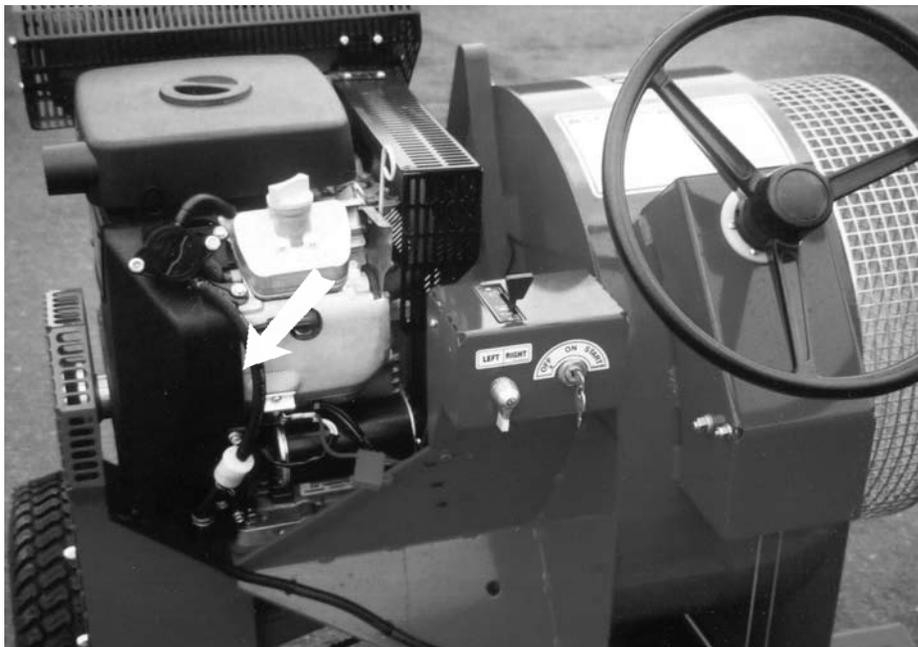

Engine

Model Number _____

Blower Serial Number _____

Engine Serial Number _____

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety	2
2.1	General Safety.....	3
2.2	Equipment Safety Guidelines	4
2.3	Safety Training.....	5
2.4	Safety Signs	5
2.5	Operating Safety.....	6
2.6	Transport Safety	7
2.7	Storage Safety	7
2.8	Refuelling Safety	7
2.9	Tire Safety	7
2.10	Maintenance Safety.....	8
2.11	Battery Safety	8
2.12	Hydraulic Safety	8
2.13	Gas Motor Safety.....	9
2.14	Sign-Off Form	10
3	Safety Sign Locations	11
4	Assembling	15
4.1	Machine Assembly.....	15
5	Operation.....	18
5.1	To the New Operator or Owner.....	18
5.2	Machine Components.....	19
5.3	Break-In	20
5.4	Pre-Operation Checklist	20
5.5	Controls	21
5.6	Field Operation	24
5.7	Transporting.....	32
5.8	Storage	33
6	Service and Maintenance.....	34
6.1	Service.....	34
6.1.1	Fluids and Lubricants	34
6.1.2	Greasing.....	34
6.1.3	Servicing Intervals.....	35
6.1.4	Service Record.....	39
6.2	Maintenance	40
6.2.1	Cleaning Air Cleaner	40
6.2.2	Changing Engine Oil and Filter	41
6.2.3	Drive Belt.....	42
6.2.4	Steering Cables.....	43
7	Trouble Shooting	44
8	Specifications	45
8.1	Mechanical	45
8.2	Bolt Torque.....	46
9	Index	60

**AGRIMETAL INC.
1006 PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0**

**TEL: (819) 398-6883
FAX: (819) 398-5311**