

AgriMetal^{INC.}



**PUSH-TYPE LEAF BLOWER
MODEL BWF 180 JOHN DEERE
BWF 180 TORO
& BWF 180 KUBOTA

OPERATOR'S MANUAL
AND PARTS BOOK**

**AGRIMETAL INC.
FRONT MOUNT LEAF BLOWER**

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new **Front mount Leaf Blower** to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Front mount Leaf Blower**.

This warranty shall not apply to any **Front mount Leaf Blower** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the **Front mount Leaf Blower** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Front mount Leaf Blower** in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL FRONT MOUNT LEAF BLOWER

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

| | |
|-------------------------------|-------------------------------|
| Customer's Name _____ | Dealer Name _____ |
| Address _____ | Address _____ |
| City, State/Prov., Code _____ | City, State/Prov., Code _____ |
| Phone Number (____) _____ | |
| Leaf Blower Model _____ | |
| Serial Number _____ | |
| Delivery Date _____ | |

DEALER INSPECTION REPORT

- ___ Blower Turns Freely
- ___ Check Engine Fluid Levels
- ___ Coupler Aligned
- ___ Fasteners Tight
- ___ Lubricate Machine
- ___ Check Tire Pressure

SAFETY

- ___ All Decals Installed
- ___ Guards and Shields Installed and Secured
- ___ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

| | |
|-----------------|-------------------------------|
| Date _____ | Dealer's Rep. Signature _____ |
| Signature _____ | |

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.


| | |
|------------|-------------------------|
| Date _____ | Owner's Signature _____ |
|------------|-------------------------|

| | | |
|----------------|--------|----------|
| WHITE | YELLOW | PINK |
| AGRIMETAL INC. | DEALER | CUSTOMER |


SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal **Front mount** Leaf Blower when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.

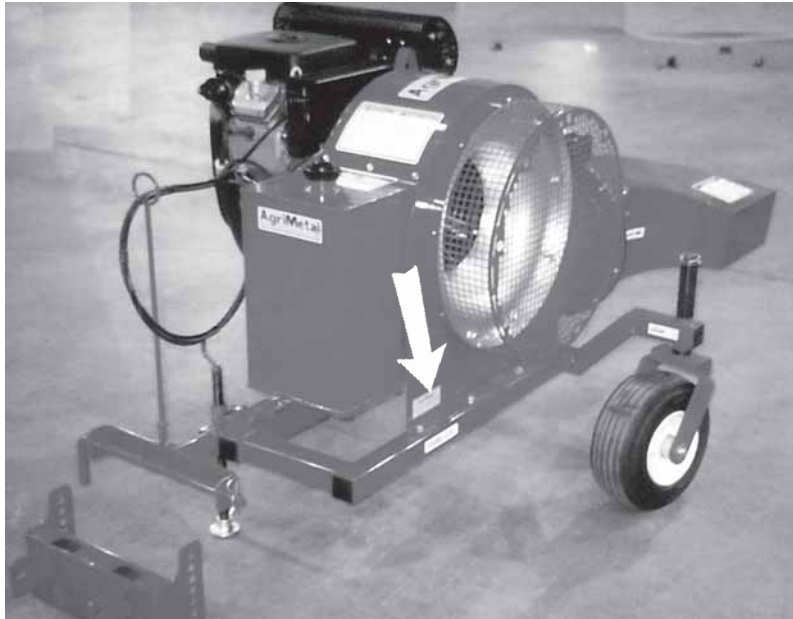

Blower

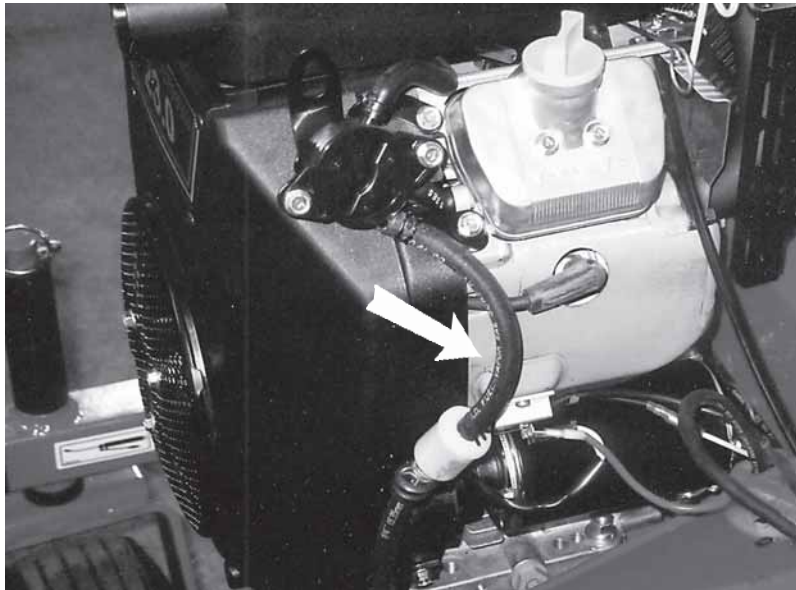

Engine

Model Number _____

Blower Serial Number _____

Engine Serial Number _____

TABLE OF CONTENTS

| SECTION | DESCRIPTION | PAGE |
|-----------|--------------------------------------|-----------|
| 1 | Introduction | 1 |
| 2 | Safety | 2 |
| 2.1 | General Safety | 3 |
| 2.2 | Equipment Safety Guidelines | 4 |
| 2.3 | Safety Training | 5 |
| 2.4 | Safety Signs | 5 |
| 2.5 | Preparation | 6 |
| 2.6 | Operating Safety | 7 |
| 2.7 | Transport Safety | 8 |
| 2.8 | Storage Safety | 8 |
| 2.9 | Refuelling Safety | 8 |
| 2.10 | Tire Safety | 8 |
| 2.11 | Maintenance Safety | 9 |
| 2.12 | Battery Safety | 9 |
| 2.13 | Gas Motor Safety | 10 |
| 2.14 | Sign-Off Form | 11 |
| 3 | Safety Sign Locations | 12 |
| 4 | Assembling | 15 |
| 4.1 | Machine Assembly | 15 |
| 5 | Operation | 21 |
| 5.1 | To the New Operator or Owner | 21 |
| 5.2 | Machine Components | 22 |
| 5.3 | Break-In | 23 |
| 5.4 | Pre-Operation Checklist | 23 |
| 5.5 | Controls | 24 |
| 5.6 | Attaching/Unhooking | 25 |
| 5.6.1 | John Deere Gator and Turf TX | 25 |
| 5.6.2 | Toro Twister | 31 |
| 5.6.3 | Kubota RTV 900 | 36 |
| 5.7 | Field Operation | 45 |
| 5.8 | Transporting | 51 |
| 5.9 | Storage | 52 |
| 6 | Service and Maintenance | 53 |
| 6.1 | Service | 53 |
| 6.1.1 | Fluids and Lubricants | 53 |
| 6.1.2 | Greasing | 53 |
| 6.1.3 | Servicing Intervals | 54 |
| 6.1.4 | Service Record | 58 |
| 6.2 | Maintenance | 59 |
| 6.2.1 | Cleaning Air Cleaner | 59 |
| 6.2.2 | Changing Engine Oil and Filter | 60 |
| 6.2.3 | Axle Height Conversion | 61 |
| 7 | Trouble Shooting | 64 |
| 8 | Specifications | 65 |
| 8.1 | Mechanical | 65 |
| 8.2 | Bolt Torque | 66 |
| 9 | Parts List | 67 |
| 10 | Index | 79 |

**AGRIMETAL INC.
1006 PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0**

**TEL: (819) 398-6883
FAX: (819) 398-5311**