

AgriMetal^{INC.}



**CORE BREAKER
MODEL 690 & 930
OPERATOR'S MANUAL
AND PARTS BOOK**

AGRIMETAL INC. CORE BREAKER

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new **Core Breaker** to be free from defects in material and workmanship, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Core Breaker**.

This warranty shall not apply to any **Core Breaker** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, hoses, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the **Core Breaker** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Core Breaker** in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL CORE BREAKER

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____ Dealer Name _____

Address _____ Address _____

City, State/Prov., Code _____ City, State/Prov., Code _____

Phone Number (____) _____

Core Breaker Model _____

Serial Number _____

Delivery Date _____

DEALER INSPECTION REPORT

- ___ Rotor rubber fingers In Good Condition
- ___ Rotor Turns Freely
- ___ Wheels Turn Freely
- ___ Belts Tensioned
- ___ Fasteners Tight
- ___ Lubricate Machine
- ___ Check Tire Pressure

SAFETY

- ___ Safety Chain on Hitch
- ___ All Decals Installed
- ___ Guards and Shields Installed and Secured
- ___ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____

Dealer's Rep. Signature _____

Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____


Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Core Breaker when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.

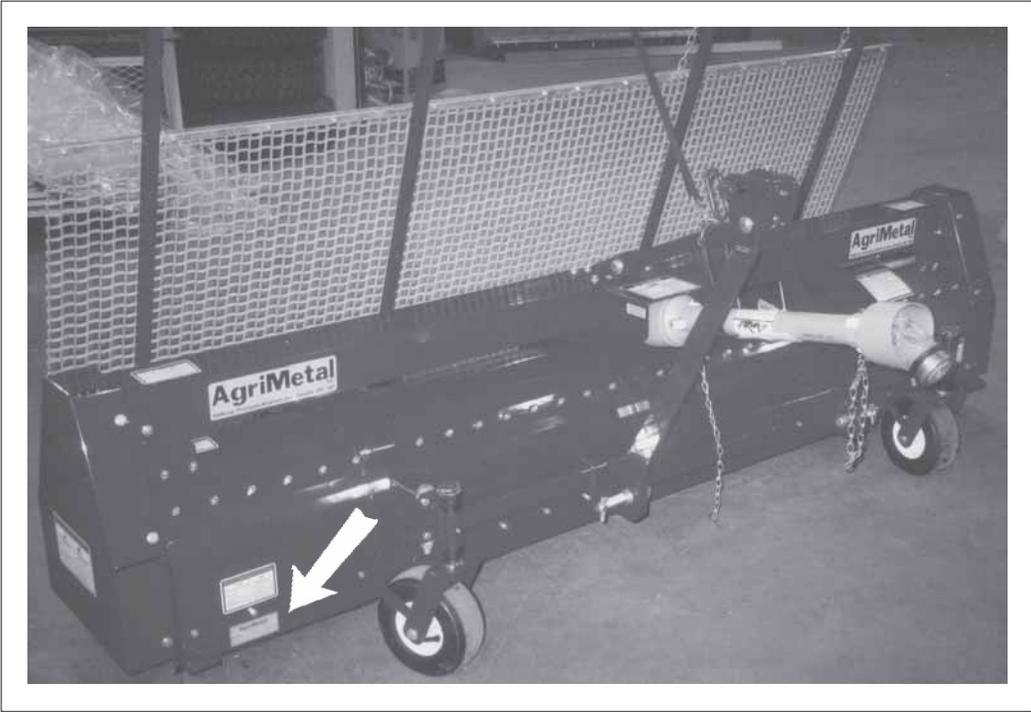

Model Number _____

Serial Number _____

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety	2
2.1	General Safety	3
2.2	Equipment Safety Guidelines	4
2.3	Safety Training	5
2.4	Safety Signs	5
2.5	Preparation	6
2.6	Storage Safety	6
2.7	Operating Safety	7
2.8	Transport Safety	8
2.9	Maintenance Safety	8
2.10	Sign-Off Form	9
3	Safety Sign Locations	10
4	Assembling	15
4.1	Machine Assembly	15
5	Operation	21
5.1	To the New Operator or Owner	21
5.2	Machine Components	22
5.3	Break-In	23
5.4	Pre-Operation Checklist	23
5.5	Equipment Matching	24
5.6	Driveline Dimension	25
5.7	Mounting and Unhooking Tractor	26
5.8	Field Operation	29
5.9	Transporting	32
5.10	Storage	33
6	Service and Maintenance	34
6.1	Service	34
6.1.1	Fluids and Lubricants	34
6.1.2	Greasing	34
6.1.3	Servicing Intervals	35
6.1.4	Service Record	38
6.2	Maintenance	39
6.2.1	Castor Shaft Spacer	39
6.2.2	Rotor Drive Belt Tension and Alignment	40
6.2.3	Gear Box	41
7	Repairs	42
8	Trouble Shooting	50
9	Specifications	51
9.1	Mechanical	51
9.2	Bolt Torque	52
9.0	Part List	53
10	Index	67

**AGRIMETAL INC.
1006 PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0**

**TEL: (819) 398-6883
FAX: (819) 398-5311**