


AgriMetal INC.

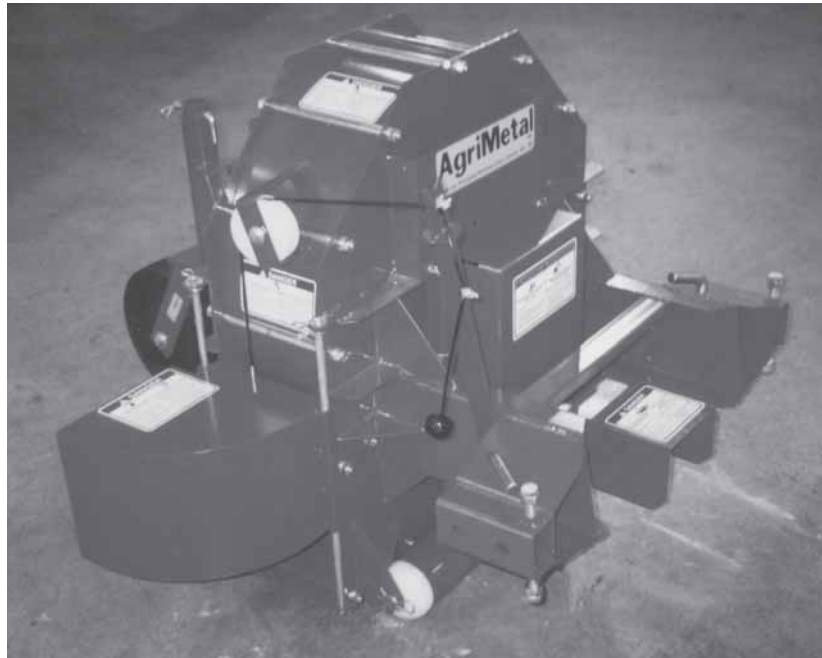

**FRONT MOUNT
LEAF AND DEBRIS BLOWER
KUBOTA F-2000 & F-60 SERIES
SIDE & REAR DISCHARGE MOWERS
FRONT MOUNT TRACTORS**

**OPERATOR'S MANUAL
AND PARTS BOOK**

**AGRIMETAL INC.
FRONT MOUNT LEAF AND DEBRIS BLOWERS**

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new **Front Mount Leaf and Debris Blowers** to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Front Mount Leaf and Debris Blowers**.

This warranty shall not apply to any **Front Mount Leaf and Debris Blowers** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the **Front Mount Leaf and Debris Blowers** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Front Mount Leaf and Debris Blowers** in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL

FRONT MOUNT LEAF AND DEBRIS BLOWERS

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____ Dealer Name _____

Address _____ Address _____

City, State/Prov., Code _____ City, State/Prov., Code _____

Phone Number (____) _____

Blower Model _____

Serial Number _____

Delivery Date _____

DEALER INSPECTION REPORT

- ___ Blower Turns Freely
- ___ Belt Tension Checked
- ___ Pulleys Aligned
- ___ Fasteners Tight
- ___ Lubricate Machine

SAFETY

- ___ All Safety Signs Installed
- ___ Guards and Shields Installed and Secured
- ___ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____

Dealer's Rep. Signature _____

Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____

Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety	2
2.1	General Safety	3
2.2	Equipment Safety Guidelines	4
2.3	Safety Training	5
2.4	Safety Signs	5
2.5	Preparation	6
2.6	Storage Safety	6
2.7	Operating Safety	7
2.8	Transport Safety	8
2.9	Maintenance Safety	8
2.10	Sign-Off Form	9
3	Safety Sign Locations	10
4	Assembling	14
4.1	Machine Assembly	14
5	Operation	19
5.1	To the New Operator or Owner	19
5.2	Machine Components	20
5.3	Break-In	21
5.4	Pre-Operation Checklist	21
5.5	Controls	22
5.6	Mounting and Unhooking Tractor	23
5.7	Field Operation	25
5.8	Transporting	29
5.9	Storage	30
6	Service and Maintenance	31
6.1	Service	31
6.1.1	Fluids and Lubricants	31
6.1.2	Greasing	31
6.1.3	Servicing Intervals	32
6.1.4	Service Record	34
6.2	Maintenance	35
6.2.1	Gauge Wheel Adjustment	35
6.2.2	Blower Drive Belt Tension and Alignment	36
7	Trouble Shooting	37
8	Specifications	38
8.1	Mechanical	38
8.2	Bolt Torque	39
9	Parts List	40
10	Index	50

SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Front Mount Leaf and Debris Blowers when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



Model Number _____

Serial Number _____

**AGRIMETAL INC.
1006 PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0**

**TEL: (819) 398-6883
FAX: (819) 398-5311**