


AgriMetal INC.

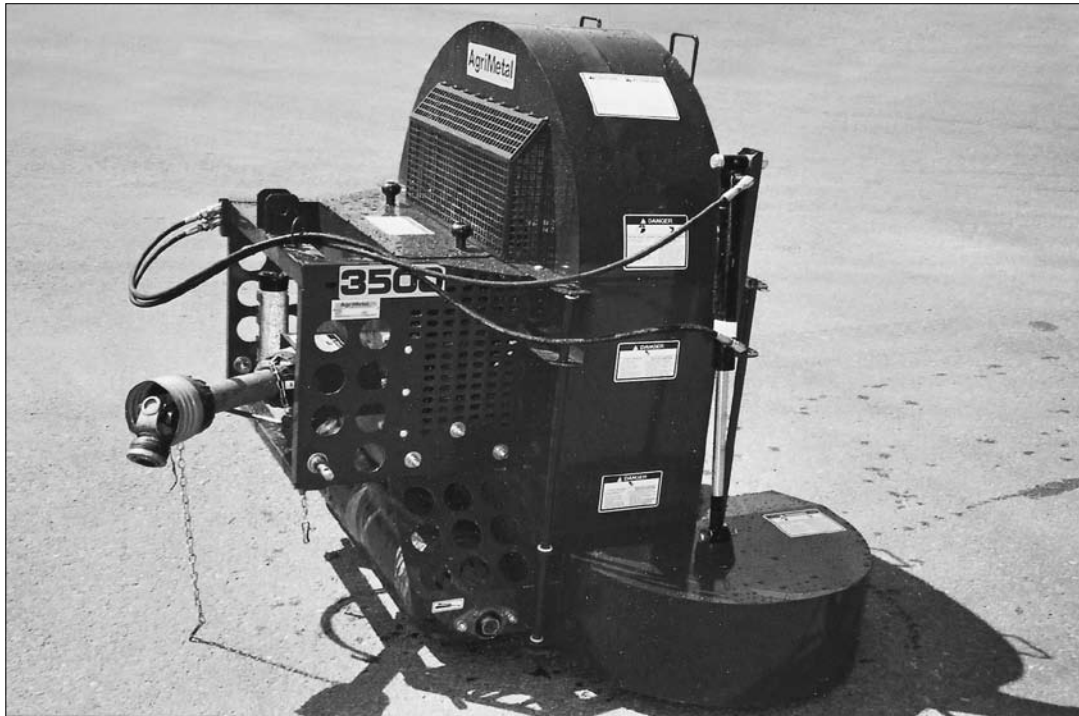

**3 POINT HITCH
LEAF AND DEBRIS BLOWERS
LOW DECIBEL SERIES
MODELS BW 2500, 3500 & 4500**

OPERATOR'S MANUAL

AGRIMETAL INC.
3 POINT HITCH LEAF AND DEBRIS BLOWERS
LOW DECIBEL SERIES

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new **3 Point Hitch Leaf and Debris Blowers** to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) parts and labour and the second and third years parts only following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective. PTO driveline shaft is covered for only one year.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **3 Point Hitch Leaf and Debris Blowers**.

This warranty shall not apply to any **3 Point Hitch Leaf and Debris Blowers** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the **3 Point Hitch Leaf and Debris Blowers** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **3 Point Hitch Leaf and Debris Blowers** in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL INC.

3 POINT HITCH LEAF AND DEBRIS BLOWERS

LOW DECIBEL SERIES

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____

Dealer Name _____

Address _____

Address _____

City, State/Prov., Code _____

City, State/Prov., Code _____

Phone Number (____) _____

Blower Model _____

Serial Number _____

Delivery Date _____

DEALER INSPECTION REPORT

SAFETY

- ___ Blower Turns Freely
- ___ Belt Tension Checked
- ___ Pulleys Aligned
- ___ Fasteners Tight
- ___ Lubricate Machine

- ___ All Safety Signs Installed
- ___ Guards and Shields Installed and Secured
- ___ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____

Dealer's Rep. Signature _____

Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____

Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal 3 Point Hitch Leaf and Debris Blowers when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



Model Number _____

Serial Number _____

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety	2
2.1	General Safety	3
2.2	Equipment Safety Guidelines	4
2.3	Safety Training	5
2.4	Safety Signs	5
2.5	Preparation	6
2.6	Storage Safety	6
2.7	Operating Safety	7
2.8	Transport Safety	8
2.9	Maintenance Safety	8
2.10	Hydraulic Safety	9
2.11	Assembling Safety	9
2.12	Sign-Off Form	10
3	Safety Sign Locations	11
4	Assembling	15
4.1	Machine Assembly	15
5	Operation	21
5.1	To the New Operator or Owner	21
5.2	Machine Components	22
5.3	Break-In	23
5.4	Pre-Operation Checklist	23
5.5	Equipment Matching	24
5.6	Driveline Dimension	25
5.7	Mounting and Unhooking Tractor	26
5.8	Field Operation	28
5.9	Transporting	34
5.10	Storage	35
6	Service and Maintenance	36
6.1	Service	36
6.1.1	Fluids and Lubricants	36
6.1.2	Greasing	36
6.1.3	Servicing Intervals	37
6.1.4	Service Record	40
6.2	Maintenance	41
6.2.1	Blower Drive Belt Tension and Alignment	41
7	Trouble Shooting	43
8	Specifications	44
8.1	Mechanical	44
8.2	Bolt Torque	45
8.3	Hydraulic Fitting Torque	46
9	Part List	53
10	Index	59

**AGRIMETAL INC.
1006 PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0**

**TEL: (819) 398-6883
FAX: (819) 398-5311**