


# AgriMetal

INC.

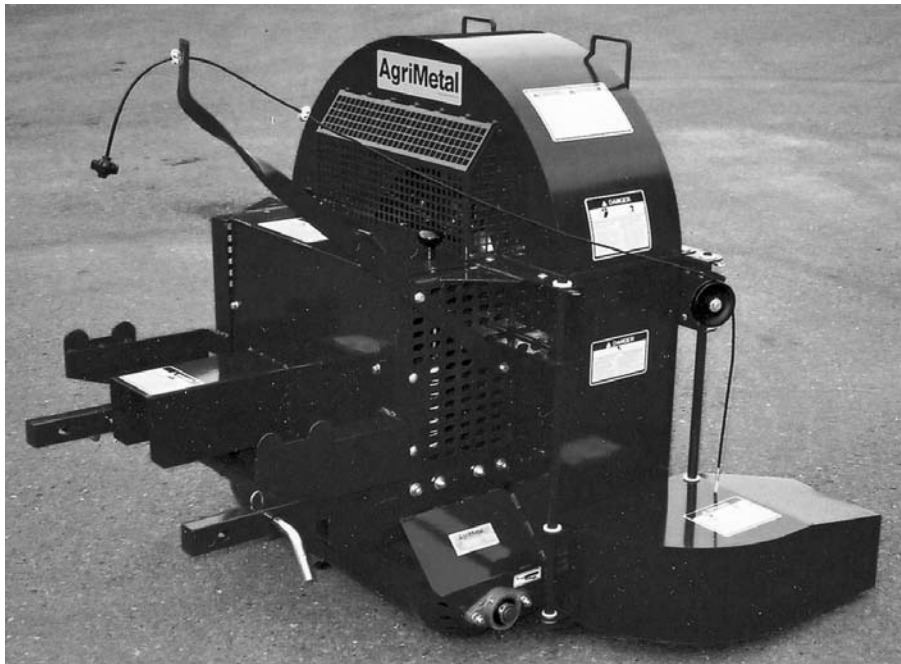

**FRONT MOUNT LEAF & DEBRIS BLOWER  
MODEL B.W. 2500-F (JD-1500)  
LOW DECIBEL SERIES  
MANUAL CHUTE ADJUST  
OPERATOR'S MANUAL**

**AGRIMETAL INC.  
FRONT MOUNT LEAF BLOWER  
LOW DECIBEL SERIES**

**WARRANTY**

AgriMetal Incorporated (AgriMetal) warrants the new **Front Mount Leaf Blower** to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

**WARRANTY CLAIMS**

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

**LIMITATIONS OF LIABILITY**

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Front Mount Leaf Blower**.

This warranty shall not apply to any **Front Mount Leaf Blower** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

**OPERATOR'S MANUAL**

The Purchaser acknowledges having received training in the safe operation of the **Front Mount Leaf Blower** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Front Mount Leaf Blower** in any manner other than described in the Operator's Manual supplied at the time of purchase.

**WARRANTY VOID IF NOT REGISTERED**

**AGRIMETAL**  
**LEAF AND DEBRIS BLOWERS**  
**LOW DECIBEL SERIES**

**WARRANTY REGISTRATION FORM & INSPECTION REPORT**

**WARRANTY REGISTRATION**

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____	Dealer Name _____
Address _____	Address _____
City, State/Prov., Code _____	City, State/Prov., Code _____
Phone Number (    ) _____	
Leaf Blower Model _____	
Serial Number _____	

**DEALER INSPECTION REPORT**

**SAFETY**

- |  |   |
|--|---|
| <input type="checkbox"/> Blower Turns Freely<br><input type="checkbox"/> Fasteners Tight<br><input type="checkbox"/> Lubricate Machine | <input type="checkbox"/> All Decals Installed<br><input type="checkbox"/> Guards and Shields Installed and Secured<br><input type="checkbox"/> Review Operating and Safety Instructions |
|--|---|

**Delivery Date**

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____	Dealer's Rep. Signature _____
Signature _____	

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____	Owner's Signature _____
------------	-------------------------

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

# SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Front Mount Leaf Blower when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



**Model Number** \_\_\_\_\_

**Blower Serial Number** \_\_\_\_\_

# TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
<b>1</b>	<b>Introduction .....</b>	<b>1</b>
<b>2</b>	<b>Safety .....</b>	<b>2</b>
2.1	General Safety.....	3
2.2	Equipment Safety Guidelines .....	4
2.3	Safety Training.....	5
2.4	Safety Signs .....	5
2.5	Preparation .....	6
2.6	Operating Safety.....	7
2.7	Transport Safety .....	8
2.8	Storage Safety .....	8
2.9	Maintenance Safety .....	8
2.10	Sign-Off Form .....	10
<b>3</b>	<b>Safety Sign Locations .....</b>	<b>12</b>
<b>4</b>	<b>Assembling .....</b>	<b>14</b>
4.1	Machine Assembly.....	14
<b>5</b>	<b>Operation.....</b>	<b>19</b>
5.1	To the New Operator or Owner.....	19
5.2	Machine Components.....	20
5.3	Break-In .....	21
5.4	Pre-Operation Checklist .....	21
5.5	Controls .....	22
5.6	Attaching/Unhooking .....	23
5.7	Field Operation .....	27
5.8	Transporting.....	34
5.9	Storage .....	35
<b>6</b>	<b>Service and Maintenance.....</b>	<b>36</b>
6.1	Service.....	36
6.1.1	Fluids and Lubricants .....	36
6.1.2	Greasing .....	36
6.1.3	Servicing Intervals .....	37
6.1.4	Service Record .....	40
6.2	Maintenance .....	41
6.2.1	Blower Drive Belt Tension & Alignment.....	41
<b>7</b>	<b>Trouble Shooting .....</b>	<b>43</b>
<b>8</b>	<b>Specifications .....</b>	<b>44</b>
8.1	Mechanical .....	44
8.2	Bolt Torque.....	45
<b>9</b>	<b>Index .....</b>	<b>49</b>

**AGRIMETAL INC.  
1006 RUE PRINCIPALE  
WICKHAM, QUEBEC  
CANADA, J0C 1S0**

**TEL: (819) 398-6883  
FAX: (819) 398-5311**