

AgriMetal INC.



Manual



Electric

**FRONT MOUNT LEAF BLOWER
MODEL B.W. 2500-F (KUBOTA-80)
LOW DECIBEL SERIES
MANUAL & ELECTRIC CHUTE ADJUST
OPERATOR'S MANUAL**

**AGRIMETAL INC.
FRONT MOUNT LEAF BLOWER
LOW DECIBEL SERIES**

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new **Front Mount Leaf Blower** to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Front Mount Leaf Blower**.

This warranty shall not apply to any **Front Mount Leaf Blower** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the **Front Mount Leaf Blower** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Front Mount Leaf Blower** in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL
FRONT MOUNT LEAF BLOWER
LOW DECIBEL SERIES

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____ Dealer Name _____
Address _____ Address _____
City, State/Prov., Code _____ City, State/Prov., Code _____
Phone Number (____) _____
Leaf Blower Model _____
Serial Number _____
Delivery Date _____

DEALER INSPECTION REPORT

SAFETY

___ Blower Turns Freely
___ Fasteners Tight
___ Lubricate Machine

___ All Decals Installed
___ Guards and Shields Installed and Secured
___ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____ Dealer's Rep. Signature _____

Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____ Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Front Mount Leaf Blower when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



Manual



Electric

Model Number _____

Blower Serial Number _____

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety	2
2.1	General Safety	3
2.2	Equipment Safety Guidelines	4
2.3	Safety Training	5
2.4	Safety Signs	5
2.5	Preparation	6
2.6	Operating Safety	7
2.7	Transport Safety	8
2.8	Storage Safety	8
2.9	Maintenance Safety	8
2.10	Sign-Off Form	9
3	Safety Sign Locations	10
4	Assembling	15
4.1	Machine Assembly (Manual)	15
4.2	Machine Assembly (Electric)	22
5	Operation	31
5.1	To the New Operator or Owner.....	31
5.2	Machine Components.....	32
5.3	Break-In	33
5.4	Pre-Operation Checklist	33
5.5	Controls	34
5.6	Attaching/Unhooking	35
5.7	Field Operation	40
5.8	Transporting.....	48
5.9	Storage	49
6	Service and Maintenance	50
6.1	Service.....	50
6.1.1	Fluids and Lubricants	50
6.1.2	Greasing	50
6.1.3	Servicing Intervals	51
6.1.4	Service Record	55
6.2	Maintenance	56
6.2.1	Blower Drive Belt Tension & Alignment.....	56
7	Trouble Shooting	58
8	Specifications	59
8.1	Mechanical	59
8.2	Bolt Torque.....	60
9	Index	61

**AGRIMETAL INC.
1006 RUE PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0**

**TEL: (819) 398-6883
FAX: (819) 398-5311**