

AgriMetal

INC.



LEAF AND DEBRIS COLLECTOR MODEL 4420

OPERATOR'S MANUAL

**AGRIMETAL INC.
LEAF AND DEBRIS COLLECTOR**

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new LEAF AND DEBRIS COLLECTOR to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the LEAF AND DEBRIS COLLECTOR.

This warranty shall not apply to any LEAF AND DEBRIS COLLECTOR which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

IMPORTANT

Warranty does not cover units that are used to pick up aeration cores. This application brings too much soil into the machine causing excessive rapid wear. Therefore this voids the warranty.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the LEAF AND DEBRIS COLLECTOR and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the LEAF AND DEBRIS COLLECTOR in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL LEAF AND DEBRIS COLLECTOR

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____ Dealer Name _____
 Address _____ Address _____
 City, State/Prov., Code _____ City, State/Prov., Code _____
 Phone Number (____) _____
 Collector Model _____
 Serial Number _____
 Delivery Date _____

DEALER INSPECTION REPORT

- ___ Blower Turns Freely
- ___ Belt Tension Checked
- ___ Pulleys Aligned
- ___ Fasteners Tight
- ___ Lubricate Machine
- ___ Check Tire Pressure
- ___ Retainer Installed in Drawer Pin
- ___ Check for Hydraulic Leaks

SAFETY

- ___ Safety Chain on Hitch
- ___ All Decals Installed
- ___ Guards and Shields Installed and Secured
- ___ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____ Dealer's Rep. Signature _____

Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____ Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Leaf and Debris Collector when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



Model Number _____

Serial Number _____

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety	2
2.1	General Safety	3
2.2	Equipment Safety Guidelines	4
2.3	Safety Training	5
2.4	Safety Signs	5
2.5	Preparation	6
2.6	Operating Safety	7
2.7	Transport Safety	8
2.8	Storage Safety	8
2.9	Maintenance Safety	8
2.10	Hydraulic Safety	9
2.11	Refuelling Safety	9
2.12	Tire Safety	9
2.13	Battery Safety	9
2.14	Gas Motor Safety	10
2.15	Sign-Off Form	11
3	Safety Sign Locations	12
4	Assembling	20
4.1	Machine Assembly	20
5	Operation	23
5.1	To the New Operator or Owner	23
5.2	Machine Components	24
5.3	Break-In	25
5.4	Pre-Operation Checklist	25
5.5	Controls	26
5.6	Attaching/Unhooking	29
5.7	Field Operation	33
5.8	Transporting	48
5.9	Storage	49
6	Service and Maintenance	50
6.1	Service	50
6.1.1	Fluids and Lubricants	50
6.1.2	Greasing	50
6.1.3	Servicing Intervals	51
6.1.4	Service Record	55
6.2	Maintenance	56
6.2.1	Cleaning Air Cleaner	56
6.2.2	Changing Engine Oil and Filter	57
6.2.3	Drive Belt Tension and Alignment	58
7	Trouble Shooting	60
8	Specifications	61
8.1	Mechanical	61
8.2	Bolt Torque	62
	Part List	63
9	Index	78

**AGRIMETAL INC.
1006 PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0**

**TEL: (819) 398-6883
FAX: (819) 398-5311**