

AgriMetal INC.



MULTI-VAC LEAF & DEBRIS VACUUM MODEL 772, 1096 AND 10120

OPERATOR'S MANUAL

**AGRIMETAL INC.
MULTI-VAC DEBRIS VACUUM**

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new **Multi-Vac Debris Vacuum** to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Multi-Vac Debris Vacuum**.

This warranty shall not apply to any **Multi-Vac Debris Vacuum** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the **Multi-Vac Debris Vacuum** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Multi-Vac Debris Vacuum** in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL MULTI-VAC DEBRIS VACUUM

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____	Dealer Name _____
Address _____	Address _____
City, State/Prov., Code _____	City, State/Prov., Code _____
Phone Number (____) _____	
Multi-Vac Model _____	
Serial Number _____	
Delivery Date _____	

DEALER INSPECTION REPORT

- ___ Blower Turns Freely
- ___ Belt Tension Checked
- ___ Check Oil Level in Drive Box
- ___ Pulleys Aligned
- ___ Fasteners Tight
- ___ Lubricate Machine
- ___ Check Tire Pressure
- ___ Retainer Installed in Drawer Pin

SAFETY

- ___ All Lights and Reflectors Installed, Cleaned and Working
- ___ Safety Chain on Hitch
- ___ All Decals Installed
- ___ Guards and Shields Installed and Secured
- ___ Review Operating and Safety Instructions
- ___ Check for Hydraulic Leaks

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____ Dealer's Rep. Signature _____

Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____ Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Multi-Vac Debris Vacuum when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



Model Number _____

Serial Number _____

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety	2
2.1	General Safety	3
2.2	Equipment Safety Guidelines	4
2.3	Safety Training	5
2.4	Safety Signs	5
2.5	Preparation	6
2.6	Operating Safety	7
2.7	Storage Safety	8
2.8	Transport Safety	8
2.9	Maintenance Safety	9
2.10	Hydraulic Safety	10
2.11	Tire Safety	10
2.12	Sign-Off Form	11
3	Safety Sign Locations	12
4	Assembling	21
4.1	Machine Assembly	21
5	Operation	31
5.1	To the New Operator or Owner	31
5.2	Machine Components	32
5.3	Break-In	33
5.4	Pre-Operation Checklist	33
5.5	Equipment Matching	34
5.6	Machine Settings	35
5.7	Controls	37
5.8	Attaching/Unhooking	38
5.9	Field Operation	43
5.10	Unloading Material	53
5.11	Transporting	54
5.12	Storage	56
6	Service and Maintenance	57
6.1	Service	57
6.1.1	Fluids and Lubricants	57
6.1.2	Greasing	57
6.1.3	Servicing Intervals	58
6.1.4	Service Record	65
6.2	Maintenance	66
6.2.1	Blower and Chipper Drive Belt Tension and Alignment	66
6.2.2	Pick-Up Drive Belt Tension and Pulley Alignment	67
6.2.3	Input Drive Belt Tension and Alignment	68
6.2.4	Rotor/Flails	69
7	Trouble Shooting	70
8	Specifications	71
8.1	Mechanical	71
8.2	Bolt Torque	72
8.3	Hydraulic Fitting Torque	73
9	Index	74

**AGRIMETAL INC.
1006 RUE PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0**

**TEL: (819) 398-6883
FAX: (819) 398-5311**