

AgriMetal

INC.



3 POINT HITCH SNOW BLOWER
MODELS MTC 3474, 3480, 4080, 4086 & 4092

OPERATOR'S MANUAL

AGRIMETAL INC.
3 POINT HITCH SNOW BLOWER

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new Snow Blower to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the Snow Blower.

This warranty shall not apply to any Snow Blower which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the Snow Blower and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the Snow Blower in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL 3 POINT HITCH SNOW BLOWER

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____ Dealer Name _____
 Address _____ Address _____
 City, State/Prov., Code _____ City, State/Prov., Code _____
 Phone Number (____) _____
 Snow Blower Model _____
 Serial Number _____
 Delivery Date _____

DEALER INSPECTION REPORT

_____ Screw Impeller Turn Freely
 _____ Fasteners Tight
 _____ Lubricate Machine
 _____ Sprockets Aligned
 _____ Roller Chain Tensioned
 _____ Hydraulic Components in Good
 Condition
 _____ Retainers Installed through Mounting Pins

SAFETY

_____ All Decals Installed
 _____ Guards and Shields Installed and Secured
 _____ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____ Dealer's Rep. Signature _____

Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.


Date _____ Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Snow Blower when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.

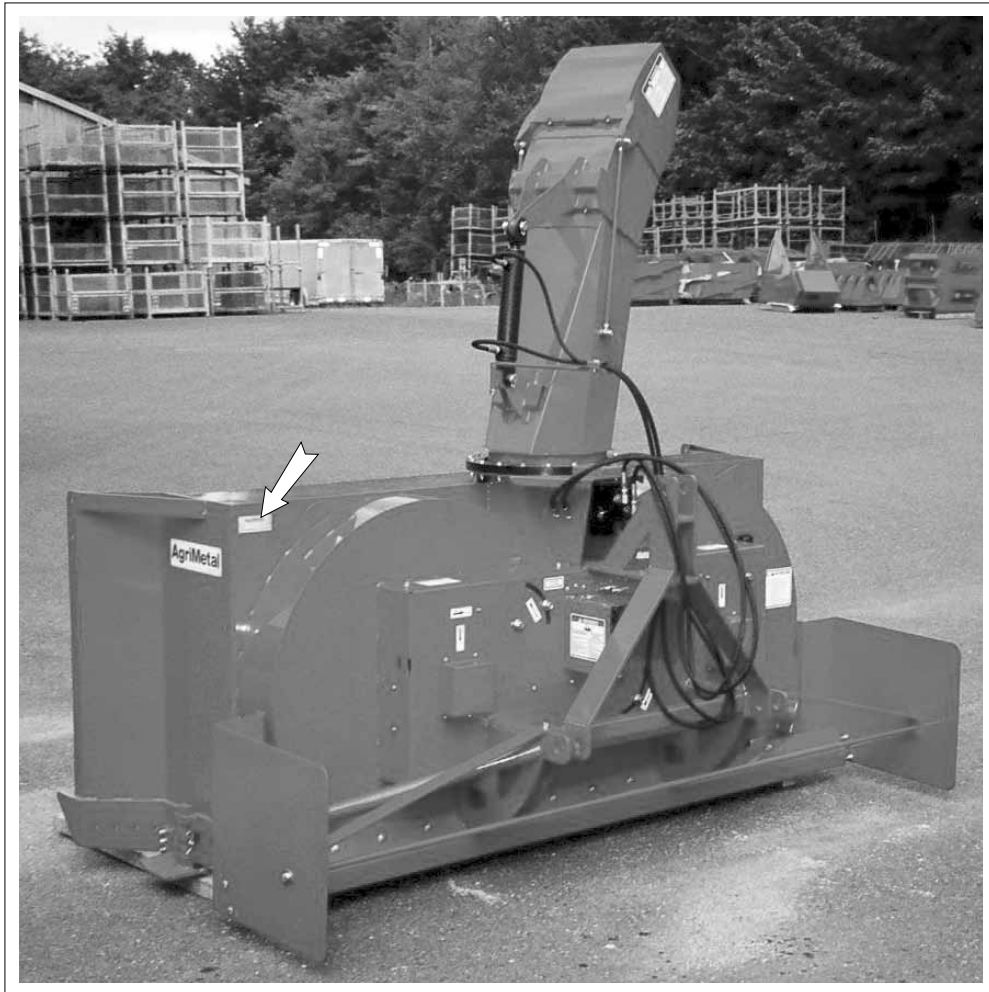

Model Number _____

Snow Blower Serial Number _____

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety.....	2
2.1	General Safety.....	3
2.2	Equipment Safety Guidelines.....	4
2.3	Safety Training	5
2.4	Safety Signs.....	5
2.5	Preparation.....	6
2.6	Operating Safety	7
2.7	Transport Safety	8
2.8	Storage Safety	8
2.9	Maintenance Safety	8
2.10	Sign-Off Form.....	9
3	Safety Sign Locations	10
4	Assembling	15
5	Operation.....	24
5.1	To the New Operator or Owner	24
5.2	Machine Components.....	25
5.3	Break-In	26
5.4	Pre-Operation Checklist	26
5.5	Driveline Dimension	27
5.6	Attaching/Unhooking.....	28
5.7	Field Operation.....	31
5.8	Transporting	39
5.9	Storage	40
6	Service and Maintenance	41
6.1	Service	41
6.1.1	Fluids and Lubricants	41
6.1.2	Greasing	41
6.1.3	Servicing Intervals.....	42
6.1.4	Service Record	45
6.2	Maintenance.....	46
6.2.1	Screw Impeller Roller Chain Tension & Alignment	46
6.2.2	Driveline Maintenance.....	47
7	Trouble Shooting	48
8	Specifications	49
8.1	Mechanical	49
8.2	Hydraulic Fitting Torque.....	49
8.3	Bolt Torque	50
9	Part List.....	51
10	Index.....	63

AGRIMETAL INC.
1006 RUE PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0

TEL: (819) 398-6883
FAX: (819) 398-5311