

# AgriMetal

INC.



TUFF VAC  
DEBRIS VACUUM  
MODEL 4000 GAS

OPERATOR'S MANUAL  
AND PARTS BOOK

**AGRIMETAL INC.  
TUFF VAC DEBRIS VACUUM**

**WARRANTY**

AgriMetal Incorporated (AgriMetal) warrants the new Tuff Vac Debris Vacuum to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

**WARRANTY CLAIMS**

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

**LIMITATIONS OF LIABILITY**

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the Tuff Vac Debris Vacuum.

This warranty shall not apply to any Tuff Vac Debris Vacuum which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

**IMPORTANT**

Warranty does not cover units that are used to pick up cores. This application brings too much soil into the machine causing excessive rapid wear. Therefore this voids the warranty.

**OPERATOR'S MANUAL**

The Purchaser acknowledges having received training in the safe operation of the Tuff Vac Debris Vacuum and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the Tuff Vac Debris Vacuum in any manner other than described in the Operator's Manual supplied at the time of purchase.

**WARRANTY VOID IF NOT REGISTERED**

**AGRIMETAL**  
**TUFF VAC DEBRIS VACUUM**

**WARRANTY REGISTRATION FORM & INSPECTION REPORT**

**WARRANTY REGISTRATION**

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____	Dealer Name _____
Address _____	Address _____
City, State/Prov., Code _____	City, State/Prov., Code _____
Phone Number ( ____ ) _____	
Tuff Vac Model _____	
Serial Number _____	
Delivery Date _____	

**DEALER INSPECTION REPORT**

- \_\_\_ Blower Turns Freely
- \_\_\_ Belt Tension Checked
- \_\_\_ Check Oil Level in Drive Box
- \_\_\_ Pulleys Aligned
- \_\_\_ Fasteners Tight
- \_\_\_ Lubricate Machine
- \_\_\_ Check Tire Pressure
- \_\_\_ Retainer Installed in Drawer Pin

**SAFETY**

- \_\_\_ All Lights and Reflectors Installed, Cleaned and Working
- \_\_\_ Safety Chain on Hitch
- \_\_\_ All Decals Installed
- \_\_\_ Guards and Shields Installed and Secured
- \_\_\_ Review Operating and Safety Instructions
- \_\_\_ Check for Hydraulic Leaks
- \_\_\_ Check Level in Hydraulic Reservoir

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date \_\_\_\_\_ Dealer's Rep. Signature \_\_\_\_\_

Signature \_\_\_\_\_

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date \_\_\_\_\_ Owner's Signature \_\_\_\_\_

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

# SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Tuff Vac Debris Vacuum when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

# TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction .....	1
2	Safety.....	2
2.1	General Safety.....	3
2.2	Equipment Safety Guidelines.....	4
2.3	Safety Training .....	5
2.4	Safety Signs.....	5
2.5	Preparation.....	6
2.6	Operating Safety.....	7
2.7	Transport Safety .....	8
2.8	Storage Safety.....	8
2.9	Maintenance Safety .....	9
2.10	Gas Motor Safety.....	10
2.11	Hydraulic Safety.....	11
2.12	Refuelling Safety .....	11
2.13	Tire Safety .....	11
2.14	Battery Safety.....	11
2.15	Sign-Off Form.....	12
3	Safety Sign Locations .....	13
4	Assembling .....	22
4.1	Machine Assembly .....	22
4.2	Assembly of Optional Hose Intake .....	27
5	Operation.....	32
5.1	To the New Operator or Owner .....	32
5.2	Machine Components.....	33
5.3	Break-In.....	34
5.4	Pre-Operation Checklist .....	34
5.5	Machine Settings .....	35
5.6	Controls .....	36
5.7	Attaching/Unhooking.....	38
5.8	Field Operation.....	39
5.9	Unloading Material .....	49
5.10	Transporting .....	51
5.11	Storage .....	53
6	Service and Maintenance .....	54
6.1	Service.....	54
	6.1.1 Fluids and Lubricants .....	54
	6.1.2 Greasing .....	54
	6.1.3 Servicing Intervals.....	55
	6.1.4 Service Record .....	59
6.2	Maintenance.....	60
	6.2.1 Cleaning Air Cleaner .....	60
	6.2.2 Changing Engine Oil and Filter.....	61
	6.2.3 Blower Drive Belt Tension and Alignment .....	62
	6.2.4 Pick-Up Drive Belt Tension and Alignment.....	63
	6.2.5 Upper Door Seal .....	64
	6.2.6 Door Latch.....	65
	6.2.7 Replaceable Wear Liner .....	66
7	Trouble Shooting .....	67
8	Specifications .....	68
8.1	Mechanical .....	38
8.2	Bolt Torque .....	69
8.3	Hydraulic Fitting Torque.....	70
9	Parts List .....	71
10	Index.....	99

AGRIMETAL INC.  
1006 PRINCIPALE  
WICKHAM, QUEBEC  
CANADA, J0C 1S0

TEL: (819) 398-6883  
FAX: (819) 398-5311