

AgriMetal INC.



PULL-TYPE TURBINE LEAF BLOWER MODEL TB-230

OPERATOR'S MANUAL

**AGRIMETAL INC.
PULL-TYPE LEAF BLOWER**

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new **Pull-Type Leaf Blower** to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Pull-Type Leaf Blower**.

This warranty shall not apply to any **Pull-Type Leaf Blower** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the **Pull-Type Leaf Blower** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Pull-Type Leaf Blower** in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL
PULL-TYPE LEAF BLOWER

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____	Dealer Name _____
Address _____	Address _____
City, State/Prov., Code _____	City, State/Prov., Code _____
Phone Number (____) _____	
Leaf Blower Model _____	
Serial Number _____	
Delivery Date _____	

DEALER INSPECTION REPORT

SAFETY

<p>_____ Blower Turns Freely _____ Belt Tension Checked _____ Check Engine Fluid Levels _____ Pulleys Aligned _____ Fasteners Tight _____ Lubricate Machine _____ Check Tire Pressure</p>	<p>_____ Safety Chain on Hitch _____ All Decals Installed _____ Guards and Shields Installed and Secured _____ Review Operating and Safety Instructions</p>
---	---

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____ Dealer's Rep. Signature _____
Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.


Date _____ Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Pull-Type Leaf Blower when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.

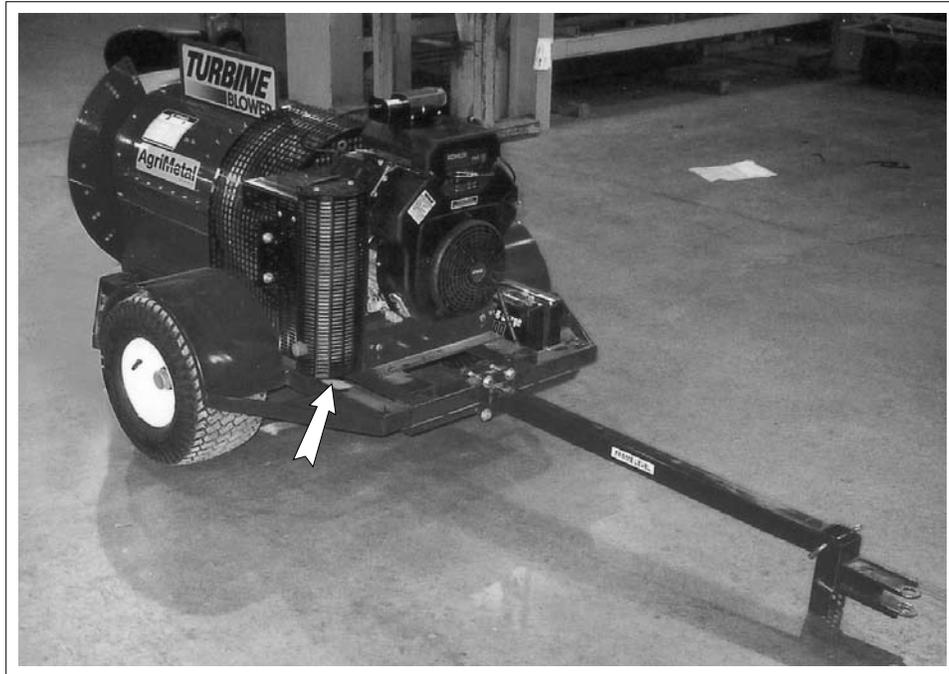

Model Number _____

Serial Number _____

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety	2
2.1	General Safety	3
2.2	Equipment Safety Guidelines	4
2.3	Safety Training	5
2.4	Safety Signs	5
2.5	Preparation	6
2.6	Operating Safety	7
2.7	Transport Safety	8
2.8	Storage Safety	8
2.9	Refuelling Safety	8
2.10	Tire Safety	8
2.11	Maintenance Safety	9
2.12	Battery Safety	9
2.13	Gas Motor Safety	10
2.14	Sign-Off Form	11
3	Safety Sign Locations	12
4	Assembling	15
4.1	Machine Assembly	15
5	Operation	21
5.1	To the New Operator or Owner	21
5.2	Machine Components	22
5.3	Break-In	23
5.4	Pre-Operation Checklist	23
5.5	Controls	24
5.6	Attaching/Unhooking	26
5.7	Field Operation	28
5.8	Transporting	33
5.9	Storage	34
6	Service and Maintenance	35
6.1	Service	35
6.1.1	Fluids and Lubricants	35
6.1.2	Servicing Intervals	36
6.1.3	Service Record	38
6.2	Maintenance	39
6.2.1	Cleaning Air Cleaner	39
6.2.2	Changing Engine Oil and Filter	40
6.2.3	Changing In Line Oil Filter	41
7	Trouble Shooting	42
8	Specifications	43
8.1	Mechanical	44
8.2	Bolt Torque	44
9	Part List	45
10	Index	52

**AGRIMETAL INC.
1006 PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0**

**TEL: (819) 398-6883
FAX: (819) 398-5311**