


AgriMetal^{INC.}

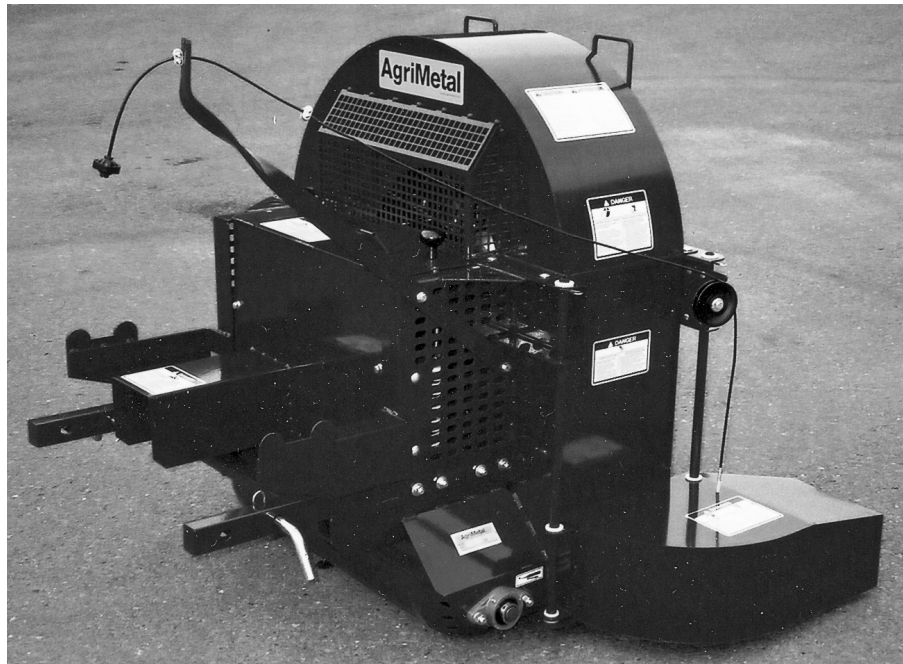

FRONT MOUNT LEAF & DEBRIS BLOWER
MODEL B.W. 2500-F (JD-1500)
LOW DECIBEL SERIES
MANUAL CHUTE ADJUST
OPERATOR'S MANUAL

AGRIMETAL INC.
FRONT MOUNT LEAF BLOWER
LOW DECIBEL SERIES

WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new Front Mount Leaf Blower to be free from defects in material, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the Front Mount Leaf Blower.

This warranty shall not apply to any Front Mount Leaf Blower which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, belts, paint and the like.

OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the Front Mount Leaf Blower and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the Front Mount Leaf Blower in any manner other than described in the Operator's Manual supplied at the time of purchase.

WARRANTY VOID IF NOT REGISTERED

AGRIMETAL
FRONT MOUNT LEAF & DEBRIS BLOWER
LOW DECIBEL SERIES

WARRANTY REGISTRATION FORM & INSPECTION REPORT

WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____

Dealer Name _____

Address _____

Address _____

City, State/Prov., Code _____

City, State/Prov., Code _____

Phone Number (____) _____

Leaf Blower Model _____

Serial Number _____

Delivery Date _____

DEALER INSPECTION REPORT

- ____ Blower Turns Freely
- ____ Belt Tension Checked
- ____ Pulleys Aligned
- ____ Fasteners Tight
- ____ Lubricate Machine

SAFETY

- ____ All Safety Signs Installed
- ____ Guards and Shields Installed and Secured
- ____ Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____

Dealer's Rep. Signature _____

Signature _____

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____

Owner's Signature _____

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Front Mount Leaf Blower when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



Model Number _____

Blower Serial Number _____

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	Introduction	1
2	Safety.....	2
2.1	General Safety	3
2.2	Equipment Safety Guidelines.....	4
2.3	Safety Training	5
2.4	Safety Signs.....	5
2.5	Preparation.....	6
2.6	Operating Safety	7
2.7	Transport Safety	8
2.8	Storage Safety	8
2.9	Maintenance Safety	8
2.10	Sign-Off Form.....	10
3	Safety Sign Locations	12
4	Assembling	14
4.1	Machine Assembly	14
5	Operation.....	19
5.1	To the New Operator or Owner	19
5.2	Machine Components.....	20
5.3	Break-In	21
5.4	Pre-Operation Checklist	21
5.5	Controls	22
5.6	Attaching/Unhooking	23
5.7	Field Operation.....	27
5.8	Transporting.....	34
5.9	Storage	35
6	Service and Maintenance	36
6.1	Service	36
6.1.1	Fluids and Lubricants	36
6.1.2	Greasing	36
6.1.3	Servicing Intervals	37
6.1.4	Service Record	40
6.2	Maintenance.....	41
6.2.1	Blower Drive Belt Tension & Alignment.....	41
7	Trouble Shooting	43
8	Specifications	44
8.1	Mechanical	44
8.2	Bolt Torque	45
9	Index.....	49

AGRIMETAL INC.
1006 RUE PRINCIPALE
WICKHAM, QUEBEC
CANADA, J0C 1S0

TEL: (819) 398-6883
FAX: (819) 398-5311