

# AgriMetal<sup>INC.</sup>



Pull-Type



3 Point Hitch

## FAIRWAY AERATOR MODEL FA 720

### OPERATOR'S MANUAL AND PARTS BOOK

# AGRIMETAL INC. FAIRWAY AERATOR

## WARRANTY

AgriMetal Incorporated (AgriMetal) warrants the new **Fairway Aerator** to be free from defects in material and workmanship, under normal use and service. Obligation under this warranty shall extend for a period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of AgriMetal, replacement or repair of any parts found, upon inspection by AgriMetal, to be defective.

### WARRANTY CLAIMS

The purchaser claiming under this warranty shall submit a warranty claim in the prescribed form to AgriMetal or an Authorized Dealer, for inspection by an authorized company representative.

### LIMITATIONS OF LIABILITY

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the **Fairway Aerator**.

This warranty shall not apply to any **Fairway Aerator** which has been altered outside the factory in any way so as, in the judgement of AgriMetal, to affect its operation or reliability, or which has been subject to misuse, neglect or accident.

This warranty does not cover parts and accessories which are under separate guarantees from the manufacturers and where service can be obtained from their service facilities. No warranty is extended to regular service items such as lubricants, hoses, paint and the like.

### OPERATOR'S MANUAL

The Purchaser acknowledges having received training in the safe operation of the **Fairway Aerator** and further acknowledges that AgriMetal does not assume any liability resulting from the operation of the **Fairway Aerator** in any manner other than described in the Operator's Manual supplied at the time of purchase.

**WARRANTY VOID IF NOT REGISTERED**

# AGRIMETAL FAIRWAY AERATOR

## WARRANTY REGISTRATION FORM & INSPECTION REPORT

### WARRANTY REGISTRATION

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer's Name _____	Dealer Name _____
Address _____	Address _____
City, State/Prov., Code _____	City, State/Prov., Code _____
Phone Number ( ____ ) _____	
Aerator Model _____	
Serial Number _____	
Delivery Date _____	

### DEALER INSPECTION REPORT

- Tire Pressure Checked
- Wheel Bolts Torqued
- Lubricate Machine
- Fasteners Tight

### SAFETY

- All Decals Installed
- Review Operating and Safety Instructions

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Date _____	Dealer's Rep. Signature _____
Signature _____	

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date _____	Owner's Signature _____
------------	-------------------------

WHITE	YELLOW	PINK
AGRIMETAL INC.	DEALER	CUSTOMER

# TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
<b>1</b>	<b>Introduction</b> .....	<b>1</b>
<b>2</b>	<b>Safety</b> .....	<b>2</b>
2.1	General Safety .....	3
2.2	Equipment Safety Guidelines .....	4
2.3	Safety Training .....	5
2.4	Safety Signs .....	5
2.5	Preparation .....	6
2.6	Storage Safety .....	6
2.7	Operating Safety .....	7
2.8	Transport Safety .....	8
2.9	Maintenance Safety .....	8
2.10	Sign-Off Form .....	9
<b>3</b>	<b>Safety Sign Locations</b> .....	<b>10</b>
<b>4</b>	<b>Assembling</b> .....	<b>12</b>
4.1	Machine Assembly .....	12
<b>5</b>	<b>Operation</b> .....	<b>19</b>
5.1	To the New Operator or Owner .....	19
5.2	Machine Components .....	20
5.3	Break-In .....	21
5.4	Pre-Operation Checklist .....	21
5.5	Equipment Matching .....	21
5.6	Mounting and Unhooking Tractor .....	22
5.7	Field Operation .....	24
5.8	Transporting .....	28
5.9	Storage .....	29
<b>6</b>	<b>Service and Maintenance</b> .....	<b>30</b>
6.1	Service .....	30
6.1.1	Fluids and Lubricants .....	30
6.1.2	Greasing .....	30
6.1.3	Servicing Intervals .....	31
6.1.4	Service Record .....	33
6.2	Maintenance .....	34
6.2.1	Tine Replacement .....	34
6.2.2	Knife Replacement .....	35
<b>7</b>	<b>Trouble Shooting</b> .....	<b>36</b>
<b>8</b>	<b>Specifications</b> .....	<b>37</b>
8.1	Mechanical .....	37
8.2	Bolt Torque .....	38
<b>9</b>	<b>Parts List</b> .....	<b>39</b>
<b>10</b>	<b>Index</b> .....	<b>48</b>


# SERIAL NUMBER LOCATION

Always give your dealer the serial number of your AgriMetal Fairway Aerator when ordering parts or requesting service or other information.

The serial number plate is located where indicated. Please mark the number in the space provided for easy reference.



**3 Point Hitch**

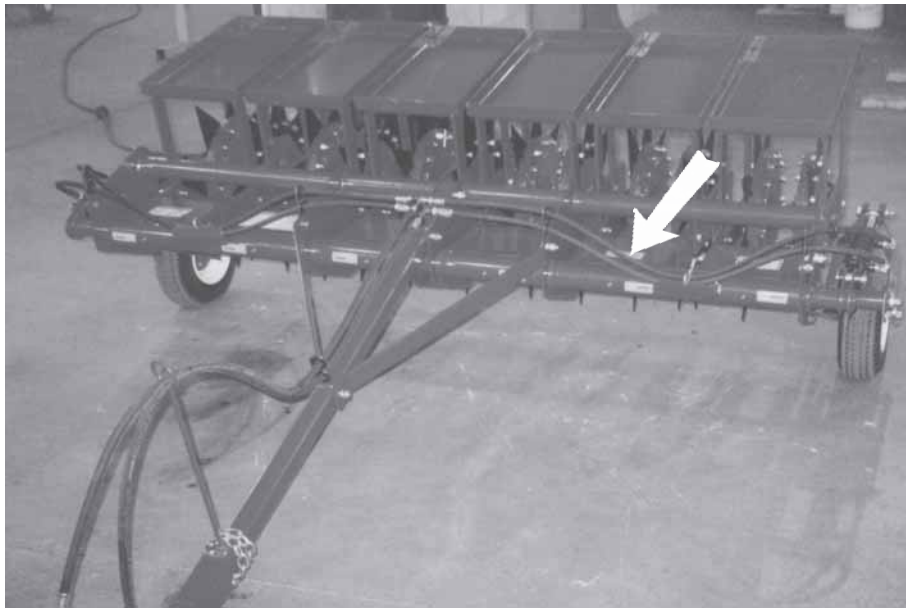

**Pull-Type**

**Model Number** \_\_\_\_\_

**Serial Number** \_\_\_\_\_

**AGRIMETAL INC.  
1006 PRINCIPALE  
WICKHAM, QUEBEC  
CANADA, J0C 1S0**

**TEL: (819) 398-6883  
FAX: (819) 398-5311**